

BEARING PULLER KIT - 5 PC INTERNAL AND EXTERNAL

Product # H3562 | Model #



- Remove internal and external bearing cups, seals, bushings etc.
- Special cone adaptor included which securely locks jaws on part to be removed
- Use with slide hammer for more torque
- Comes in a convenient blow mould storage case
- Kit includes: