



DISC BRAKE CALIPER TOOL SET

Product No. H3444

Assist in the replacement of brake pads on most 2 and 4-wheel disc brake vehicles. This tool performs two functions. It will force the brake piston straight back into the caliper as well as rotating the pistons back into the brake caliper on vehicles with self-adjusting parking brakes.

Instructions for Caliper Assemblies with Integral Parking Brakes.

1. Remove the old disc pads from the caliper following the manufactures instructions.
2. Select the proper adapter that fits your piston and install onto the end of the forcing screw.
3. Install the forcing plate over the top of the thrust bolt (forcing screw).
4. Insert the tool into the caliper and align the adapter plate with the slots in the piston. You are now ready to press the piston back into the caliper.
5. Turn the T-handle clockwise while holding the main body of the tool with a wrench. The piston will rotate while being pressed into the caliper. Continue until the piston is flush with the caliper body.
6. Check piston boot, making sure it is not twisted or pinched.
7. You can now install the new brake pads.

Instructions for Regular Calipers.

1. Remove the old disc pads from the caliper following the manufactures instructions.
2. Select the adapter with the three concentric circles.
3. Install the forcing plate over the top of the thrust bolt (forcing screw).
4. Insert the tool into the caliper and align the adapter plate over the piston. You are now ready to press the piston back into the caliper.
5. Turn the T-handle clockwise while holding the main body of the tool with a wrench. The piston will rotate while being pressed into the caliper. Continue until the piston is flush with the caliper body.
6. Check piston boot, making sure it is not twisted or pinched.
7. You can now install the new brake pads.

Caution: Always Wear Eye Protection