

REPAIR PARTS LIST

01	Main post	(1)	14	Caster 3-1/2"	(2)
03	Side Leg	(1)	15	Nut M10	(3)
04	Bolt M12 x 80	(1)	17	Flat Washer 16	(6)
05	Head mounting plate	(1)	19	Open Pin	(2)
06	Lock pin	(1)	20	Front Leg	(1)
07	Mounting arm	(4)	21	Side Leg	(1)
08	Bolt M12 x 60	(4)	23	Rear Wheel 4"	(2)
09	Washer, flat steel 13	(4)	24	Bolt M12 x 70	(2)
10	Hex nut M12	(4)	25	Handle	(1)
11	Spring washer 13	(1)	26	Nut	(8)
12	Washer Flat 10	(2)	27	Washer	(8)
			28	Bolt	(8)

